

# IMPORTANT INSTRUCTIONS & OPERATING MANUAL

# LENOXX

**Floor Standing Fireplace**

**Item No: LF100**



**Read these instructions carefully before attempting to assemble, install, operate or maintain the product. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and / or property damage. Retain instructions for future reference.**



## GENERAL SAFETY INFORMATION

**When using this fireplace, basic precautions should always be taken to reduce the risk of fire, electric shock and injury to persons, including the following:**

**CAUTION** – Due to the high temperature, keep electrical cords, drapery and other furnishings at least 3 feet from the front, side and rear of the fireplace.

**CAUTION - HOT!** The heater is hot when it is in use. To avoid burns, do not let bare skin touch hot surfaces.

1. Carefully read all instructions before using the fireplace and retain for future reference.
2. Remove the unit from its packaging and check to make sure it is in good condition before use.
3. Do not let children play with any parts of the packing (such as plastic bags, etc.).
4. Check the household voltage to ensure that it matches the fireplace's rated specification.
5. Before using the fireplace, carefully check the power cord and plug for any damage.
6. Be sure that the room is equipped with a working smoke detector.
7. Before unplugging the power cord, turn off the power. When touching the unit, keep your hands dry to prevent electric shock.
8. Do not place the fireplace near curtains or other inflammable objects. Keep combustible materials, such as pillows, bedding, papers, clothes, and curtains at least 3 feet away from the front, side and rear of the fireplace.
9. Ensure the unit is not blocked and there is spacing of at least 50cm around its sides and at least 120cm from the front.
10. Do not block air intakes or exhaust in any manner to prevent fire.
11. Do not use on soft or uneven surfaces, like a bed, where openings may become blocked.
12. Do not place the heater on long pile carpet or rugs.
13. Ensure the heater is placed on a level surface with enough clearance from its surroundings.
14. Exhibit extreme caution when any fireplace is in the vicinity of children and infants.
15. Never leave children or infants unattended while the fireplace is on or plugged in.
16. When not in use, switch off and always unplug the fireplace.
17. Prevent water from entering the housing of the fireplace during operation or while in storage.
18. Always store the fireplace in a dry area free from any moisture. This fireplace is not intended for use in bathrooms, laundry areas, or similar indoor locations. Never place the fireplace where it may fall into a bath tub or get exposed to water in any way.
19. Do not use in places where gasoline, paint, or other flammable liquids are used or stored. Do not use when flammable sprays, solvents or glues are in use.
20. Do not run the cord under carpets. Do not cover the cord with throw rugs, runners, or similar products. Arrange the cord away from traffic areas such that it will not be tripped over by anyone.
21. Do not operate any fireplace with a damaged cord, a damaged plug, after the fireplace malfunctions, or if it has been dropped or damaged in any manner. Return the fireplace to an authorized service facility for examination, electrical or mechanical adjustment, or repair.
22. Do not insert fingers or allow foreign objects to enter any ventilation or exhaust opening as this may lead to an electric shock or fire, or may even damage the fireplace.

23. This fireplace becomes hot during use. To avoid burns, do not let bare skin touch hot surfaces. If necessary, use the handles when moving this fireplace.
24. Use this fireplace only as described in this manual. Any other uses not recommended by the manufacturer may cause fire, electric shock, or personal injury and may void warranty privileges.
25. Always plug fireplaces directly into a wall outlet. Never use an extension cord, power strip, surge protector, multiple outlet adapter, cord reel or outlet-type air freshener. The use of such devices creates a fire hazard.
26. Ensure the heater is not directly located under the wall outlet.
27. Faulty wall outlet connections may cause the wall outlet to overheat. Be sure that the fireplace plug properly fits into the outlet before each use. During use, make sure the fireplace plug does not overheat. If necessary, have a qualified electrician check and / or replace the wall outlet.
28. Do not place the fireplace near a bed for objects such as pillows or blankets can fall off the bed and be ignited by the fireplace.
29. Never clean this fireplace while it is plugged in. To disconnect, turn control to OFF, then remove the plug from the outlet. Never pull the cord. Always hold the plug firmly and then remove from the outlet.
30. This fireplace is intended for supplemental heat and / or decorative purposes. Continuous use for several hours can impact the performance and life of the fireplace.
31. It is not intended to be used in commercial, industrial or agricultural settings.
32. Do not use outdoors.
33. Do not use the heater with a timer or separate remote control system.
34. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when the product is used by or near children or invalids. Children should be supervised to ensure that they do not play with the appliance.
35. Do not leave the heater running unattended.
36. Always disconnect the unit when moving it from one location to another.
37. The unit does not contain any serviceable parts inside. Do not attempt to open and repair the unit yourself. All components should only be serviced by a qualified technician.

## **Getting Started**

- Remove the fireplace from the box.
- Remove the packaging. Place it inside the box or safely dispose elsewhere.

## **Package Contents**

- Electric Fireplace
- Instruction Manual

## **Features**

- Floor standing electric fireplace
- Contemporary & portable design
- Dual heat settings (850Watts / 1600Watts)
- Realistic wooden log flame effect
- Flames operate with & without heat

- Adjustable flame brightness
- 1400 Watts
- Built-in overheating protection, auto safety shut-off
- Cool touch housing
- No assembly or hardware needed. Simply plug & heat

### **Quick Reference Guide**

- Prior to installation, please ensure that the voltage and capacity of your power outlet is compatible with your fireplace.
- Your fireplace may emit a slight, harmless odor during its first use. This odor is a normal reaction caused by the initial heating of internal fireplace parts and it will not occur again.
- It is normal for fireplace to make a rattling sound for a short duration of time during its first use.
- If your fireplace does not emit heat, please ensure the fireplace switch is on. For further information, please refer to the Troubleshooting section of this manual.

### **Helpful Advice before Installation**

- Please retain all packaging until all the parts and other package contents are accounted for.
- It is recommended to place your fireplace near an existing wall outlet for ease of electric connection.
- Store your fireplace in a dry, safe and dust-free place while drilling during fireplace installation.
- Do not attempt to wire new outlets or circuits. To reduce the risk of fire, electric shock or injury to persons, always have a licensed electrician perform maintenance and repairs.

 
### **Instructions for Use**

This fireplace can be operated with the switches located on the rear panel of the fireplace.

- Plug the fireplace into a power outlet.
- Switch “I” button ON to turn on the fireplace.
- Adjust the dimming knob for the desired flame effect.
- Turn the II button ON for low heat.
- Turn the II & III button ON for high heat.
- Adjust the thermostat control knob to regulate the heat.

### Operating controls

The control panel on this electric flame effect heater has three switches and two adjustment knobs, as illustrated below.

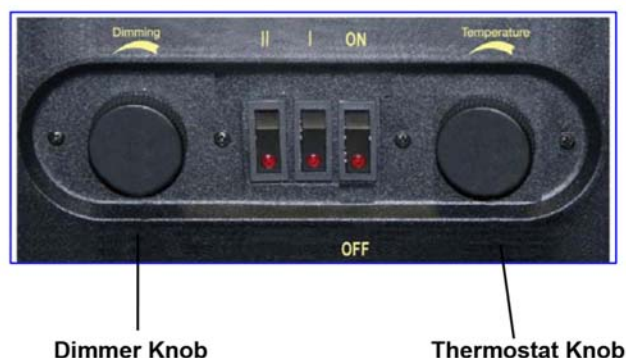

ON / OFF	Press to switch the heater on or off.
Low Heat "I"	Press to select 850W heat output
High Heat "II"	Press this and the Low Heat "I" switch to select 1600W heat output.
Dimmer Knob	Turn to select the desired flame effect intensity.
Thermostat Knob	Turn to regulate the temperature ( see details under THERMOSTAT below)

### Thermostat

The thermostat is used to control the room temperature. It acts as a switch and does not vary the amount of heat output from the heater.

- Turn the thermostat knob clockwise until the maximum temperature setting is reached.
- Once the desired room temperature is reached, slowly turn the thermostat knob anti-clockwise until you hear a click. The heater will not stop working.
- The heater will turn on and off automatically maintaining the room temperature you have set.

### Auto Safety Shut-Off Mechanism

 
 
- This fireplace is equipped with a safety shut-off feature which initiates if the fireplace overheats (e.g. Due to blocked air vents). For safety reasons, the fireplace will NOT automatically reset, and will need to be manually turned ON.
- To restart the fireplace, unplug the fireplace from the power outlet for at least 15 minutes. Next, reconnect to the power outlet and turn on the fireplace.

## Troubleshooting

Problem	Possible Solution
Unit does not work / does not heat	<ul style="list-style-type: none"><li>• Check if the unit is plugged in the power outlet.</li><li>• Check if the unit is in Standby mode. If so, turn the unit ON.</li><li>• Check if the heat is turned OFF.</li><li>• Check for safety cut-off operation.</li></ul>
No flame effect	<ul style="list-style-type: none"><li>• Check if the unit is plugged in the power outlet.</li><li>• Check if the unit is in Standby mode. Turn the unit ON.</li></ul>

## Replacing the Light Bulb

- This fireplace consists of 2 bulbs (E-12, 40W) that illuminate a flame effect. The light bulbs need to be replaced if you notice a dark section of the flame or when the flames lose clarity.
- **Warning** - Always disconnect from the power outlet before removing bulbs to reduce the risk of fire, electric shock or damage to property.
- **Warning** - The bulb reaches high temperatures during operation. Allow it to cool down before replacing it.
- Access the bulb panel located on the rear panel of the fireplace (see figures below).

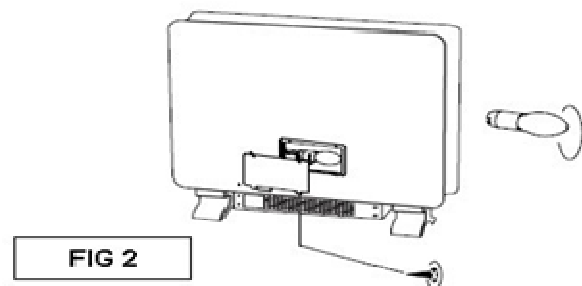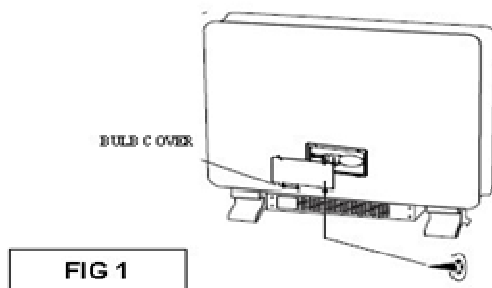

- Access the bulb by removing the four screws located on the back panel.
- Replace the bulb with a new one. Extra caution should be taken because the bulb can be hot.
- Close the panel lid using screws.
- **Warning** – Do not use fireplace without properly putting the lid back in place.
- **The light bulb may only be replaced by the manufacturer or qualified service agent.**

## **Cleaning & Maintenance**

- Switch off and disconnect from the power supply before attempting any maintenance or cleaning in order to reduce the risk of fire, electric shock to persons or damage to property.
- **Warning** - Always disconnect from the power supply before cleaning fireplace.
- For general cleaning, use a soft, clean duster. Never use abrasive cleaners. The glass viewing screen should be cleaned thoroughly with a soft cloth. Do **NOT** use proprietary glass cleaners.
- Be careful not to touch the heating elements. Do not allow any water or any other liquid to enter the housing or control panel.
- Always keep the air inlet and outlet openings free from any dust or fluff – use a vacuum cleaner fitted with a dusting brush to remove accumulated dust when necessary. Do not probe any opening to remove dust or fluff.

## **Storage**

If the heater is not in use for a long period, pack the heater and user manual into the original box and store in a cool, dry and well ventilated place.

## **Technical Specification**

- Supply: 240V, 60Hz
- Rated Power: 1600W
- Bulb: 2 x 40W E14

# LENOXX

Lenoxx Electronics Aust. Pty Ltd  
Importers and Wholesalers of Electronics and toys  
6 Oban court, Laverton North. Victoria. 3026  
ABN: 97 844 321 851  
PH: 03 9267 2100  
FAX: 03 9267 2199  
For service call: 1300 666 848  
Email: [lenoxx@lenoxx.com.au](mailto:lenoxx@lenoxx.com.au)  
[www.lenoxx.com.au](http://www.lenoxx.com.au)